

Changing Time on MICS

by Affordable Communications

Changing The Date and Time

<p>1 Press FEATURE * * T I M E <>**8463> The display shows</p>	<table border="1"> <tr> <td>Password</td> <td></td> </tr> <tr> <td></td> <td>RETRY</td> </tr> </table>	Password			RETRY				
Password									
	RETRY								
<p>2 Press B A S I C <22742></p>	<table border="1"> <tr> <td>Hour: 01</td> <td></td> </tr> <tr> <td>NEXT</td> <td>CHANGE</td> </tr> </table>	Hour: 01		NEXT	CHANGE				
Hour: 01									
NEXT	CHANGE								
<p>In this example, you are changing the time to 1:30 p. m. 3 Press CHANGE The display shows</p> <p>NOTE: Press the dial pad button to enter the hour. Use two digits for all hours. The clock in the display will show either one or two digits. NOTE: The display will prompt you to enter A.M. or P. M. Press CHANGE and OK to select P.M.</p>	<table border="1"> <tr> <td>Hour:_</td> <td></td> </tr> <tr> <td colspan="2">CANCL</td> </tr> <tr> <td>AM</td> <td></td> </tr> <tr> <td>OK</td> <td>CHANGE</td> </tr> </table>	Hour:_		CANCL		AM		OK	CHANGE
Hour:_									
CANCL									
AM									
OK	CHANGE								
<p>4 After you have entered in the hour Press NEXT The display shows</p>	<table border="1"> <tr> <td>Minutes: 00</td> <td></td> </tr> <tr> <td>NEXT</td> <td>CHANGE</td> </tr> </table>	Minutes: 00		NEXT	CHANGE				
Minutes: 00									
NEXT	CHANGE								
<p>5 Press CHANGE The display shows NOTE: If you are only changing the time and not the date, Press Rls to end your session. In this example, you are changing the date to July 15, 2001</p>	<table border="1"> <tr> <td>PasswordMinutes: —</td> <td></td> </tr> <tr> <td colspan="2">CANCL</td> </tr> </table>	PasswordMinutes: —		CANCL					
PasswordMinutes: —									
CANCL									
<p>6 After you enter in the minutes Press NEXT. The display shows</p>	<table border="1"> <tr> <td>Year : 99</td> <td></td> </tr> <tr> <td>Next</td> <td>Change</td> </tr> </table>	Year : 99		Next	Change				
Year : 99									
Next	Change								
<p>7 Press CHANGE The display shows > Press the dial pad to enter the year.</p>	<table border="1"> <tr> <td>Year:01</td> <td></td> </tr> <tr> <td colspan="2">CANCL</td> </tr> </table>	Year:01		CANCL					
Year:01									
CANCL									
<p>8 Press NEXT</p>	<table border="1"> <tr> <td>Month:</td> <td></td> </tr> </table>	Month:							
Month:									

Changing Time on MICS

by Affordable Communications

The display shows	<table border="1"><tr><td>01</td><td></td></tr><tr><td>NEXT</td><td>CHANGE</td></tr></table>	01		NEXT	CHANGE
01					
NEXT	CHANGE				
9 Press CHANGE Press the dial pad to enter the month. Use numbers for the months: 01 January; 12 is December.					
10 Press NEXT The display shows	<table border="1"><tr><td>Day: 01</td><td></td></tr><tr><td>NEXT</td><td>CHANGE</td></tr></table>	Day: 01		NEXT	CHANGE
Day: 01					
NEXT	CHANGE				
11 Press CHANGE The display shows	<table border="1"><tr><td>Day: __</td><td></td></tr><tr><td>Cancel</td><td></td></tr></table>	Day: __		Cancel	
Day: __					
Cancel					
Press the dial pad buttons to enter the day Press Rls to end your Session.					

Method 2

Feature ** 266344
Password 23646

3 triangles will appear on line display

Press bottom right triangle until Time and Date appears
Press Top right triangle to show

Press change on display as shown above