


Changing Time and Date on Meridian Norstar

Feature **266344

Pswd: ADMIN (23646)

**Use program template below to navigate through programming. Place template over top four buttons that have triangles in LCD when entering programming mode. See below:

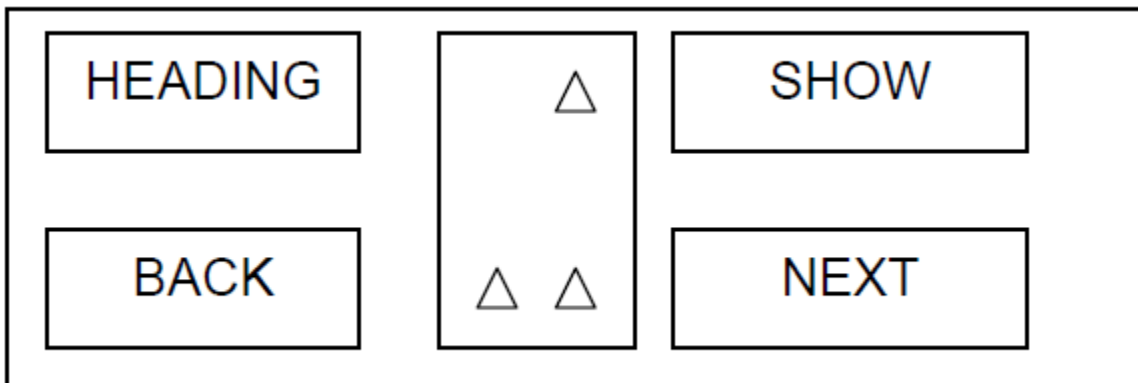

See: TERMINALS AND SETS

Press NEXT (5 times) until you see TIME & DATE

Press SHOW

Press CHG and NEXT on Display to make time and date changes.

Press RLS to finish programming.